



MENTIS ENGINEERING

On-site Nitrogen (N₂) gas generation solutions

S-PSA-7-N₂

Nitrogen Generator Datasheet

MODEL
S-PSA 7

MODEL FLOW / MODEL PURITY
31.5 Nm³/hr @ %99.9

REVISION
ME-TK-2607

DATE
2026-07-02

S-PSA Nitrogen Generators

S-PSA Nitrogen Generators use Pressure Swing Adsorption technology to separate nitrogen molecules from the other molecules in compressed air. As a result, high-purity nitrogen gas is produced at the generator outlet.

How Do PSA Generators Work?

Air consists of approximately 21% oxygen, 78% nitrogen, 0.9% argon and trace gases. PSA nitrogen systems separate nitrogen from compressed air through Carbon Molecular Sieve adsorption cycles.

Mentis's Unique S-PSA Technology

Mentis Engineering's Serial-PSA technology improves conventional PSA architecture with a two-stage process structure. In the first stage, compressed air is purified from moisture, particles, oil vapor and unwanted components that may affect process performance. In the second stage, nitrogen is separated from other gases through the CMS adsorption cycle. This architecture is designed for lossless and efficient air preparation, more stable purity, extended adsorbent lifetime and high-purity nitrogen generation.

Nitrogen Gas Applications

Laser Cutting

High-purity assist gas for stable cutting and reduced oxidation risk.

Food Packaging

Inert atmosphere for MAP applications supporting extended shelf life.

Electronics Manufacturing

Controlled nitrogen atmosphere for soldering, PCB production and testing.

Chemical & Process

Continuous nitrogen supply for reactors, tanks and line inerting.

Heat Treatment

Controlled process atmosphere to help reduce oxidation risk.

Fire Prevention

Inerting systems designed to reduce oxygen concentration.

Pharma & Medical Packaging

Protective atmosphere applications to reduce moisture and oxygen exposure.

Metallurgy & Welding

Stable nitrogen generation for shielding gas and blanketing applications.

Oil & Gas

Line purging, pipeline sweeping and tank blanketing applications.

Plastics & Injection

Nitrogen usage for process stability and oxidation control.

Tire Inflation

Nitrogen filling applications for pressure stability and moisture control.

Laboratory & Analysis

On-site nitrogen for analytical instruments and controlled atmospheres.

Technical Summary

PSA + CMS Technology

Oxygen, CO₂ and moisture are adsorbed by CMS; nitrogen gas is obtained on the product side.

Twin-Column Cycle

One column produces while the other regenerates; this cycle ensures continuous generation.

Integrated Desiccant Dryer

The average 15% air loss that may occur with external desiccant dryers is reduced to 0% through the integrated design.

Pressure Range

Standard generator outlet pressure can be configured between 1 - 10 bar(g).

Feed Air

ISO Class 1.4.1 compressed air quality and maximum +3°C dew point are required for stable

Control & Monitoring

PLC/HMI, purity measurement, digital flowmeter, consumption graphs and Modbus / RTU enable





MENTIS ENGINEERING

On-site Nitrogen (N₂) gas generation solutions

Technical Specifications

Model	S-PSA-7-N2
Model purity	%99.9
Model flow	31.5 Nm ³ /hr
Nitrogen Pressure	1.0 - 10.0 bar(g)
Nitrogen Dew Point	-40 °C
Air / N ₂ Ratio	3.212
Required Compressed Air	101.3 Nm ³ /hr
Power options	110-240V AC 50/60 Hz 150 W
PLC / HMI:	7"

Requirements

Required feed air pressure	6.0 - 11.0 bar(g)
Pressure drop	1.2 bar(g)
Minimum nitrogen tank volume	600 L
Maximum Feed Air Dew Point	+3°C
Air Quality	ISO 8573-1 Class 1.4.1
Ambient Temperature Range	-5 / +50°C

Reference Conditions

Ambient pressure	1013 mBar
Ambient temperature	20°C
Compressed air inlet pressure	7.5 bar
Compressed air inlet quality	ISO 8573-1 Class 1.4.1

Advantages

Low Gas Generating Cost

On-site generation helps reduce cylinder, liquid tank, filling and logistics costs.

Plug & Play Single Skid Design

Integrated dryer, filtration, PLC/HMI, analyzer and flowmeter infrastructure provide a compact ready-to-install system architecture.

Product Gas Quality

Nitrogen purity and process data can be continuously monitored, recorded and verified.

Easy Installation

Fast commissioning is supported with only suitable compressed air quality and electrical supply.

Heavy Duty Construction

Skid frame and durable process components are used for industrial site conditions.

Low dBa Levels

Exhaust silencing muffler and optimized valve venting are designed for low sound levels.

Low Energy Consumption

Properly selected S-PSA capacity and optimized air consumption support efficient operation.

Fully Automatic Unattended Operation

PLC-controlled operation, alarm management and automatic standby reduce operator intervention.

Highly Reliable

High cycle life valves, premium adsorbent media and industrial design provide stable production.

Low Maintenance

Simple process architecture, smart maintenance alarms and service infrastructure reduce maintenance effort.

No Hazardous Storage

On-site production reduces the need for high-volume cylinder or cryogenic storage.

Digital Traceability

PLC/HMI and sensor infrastructure allow process values to be monitored and reported easily on site.

Nitrogen Purity / Nitrogen Flow Chart - S-PSA-7-N2

Nitrogen flow

%95	85.1
%96	78.8
%97	71.9
%98	63.0
%99	50.8
%99.5	42.7
%99.9	31.5
%99.95	24.0
%99.99	18.4
%99.999	12.0
%99.9995	10.9

Compressed air requirement

%95	157.4
%96	151.7
%97	146.1
%98	137.8
%99	122.7
%99.5	112.0
%99.9	101.3
%99.95	82.6
%99.99	78.7
%99.999	66.1
%99.9995	68.2



MENTIS ENGINEERING

On-site Nitrogen (N₂) gas generation solutions

Mechanical and Dimensional Data

Adsorber diameter	350 mm
Adsorber body height	1,350 mm
Generator vessel volume	129.9 L
W x L x H (mm)	1400 x 900 x 2260
Inlet connection	1 1/2"
Outlet connection	1"
Product gas outlet for selected purity	1/2"
DN size	DN15

Integrated Desiccant Dryer Details

Dryer vessel volume	10.71 L x2 = 21.42 L
Adsorbent type	Activated Alumina
Total active alumina quantity	14.99 kg
Dryer body height	1,350 mm
Dryer maximum pipe size	1 1/4"
Dryer diameter	5" / 141.3 mm
Dryer inner pipe size	1 1/4"

PSA Adsorber Vessel Details

Adsorber diameter	350 mm
Dished-end thickness	6 mm
Adsorber body height	1,350 mm
Shell thickness	6 mm
Dished-end volume	8.1 L
Shell volume	121.1 L
Single-column total volume	137.3 L
Twin-column total volume	274.5 L
CMS quantity	173.0 kg
CMS brand / origin / model	Kuraray / Japan / GN-UC-H

Standard Features

- Continuous and stable nitrogen generation with N₂ S-PSA technology.
- Two-stage Serial-PSA process architecture: pre-treatment + nitrogen separation cycle.
- Integrated self-desiccant air dryer system.
- Integrated 0.1 and 0.01 micron line filtration.
- Automatic shutdown / startup / standby operating mode.
- High cycle life pneumatic / electric actuated process valves.
- O₂ / N₂ analyzer with calibration kit.
- Pressure safety valve and nitrogen pressure regulator.
- PLC control system and 7" color touch HMI.
- Integrated volumetric nitrogen flow display via digital flowmeter.
- 24/7 pressure, purity, consumption and trend recording infrastructure.
- Smart maintenance and service alarm system.
- LAN / Ethernet connection infrastructure.
- Carbon steel skid construction.
- Exhaust silencing muffler for reduced vent noise.
- Highest performance adsorbent media / CMS filling.
- Stainless construction for all valves and process connections.
- 2-year warranty; service and spare parts support.

Optional Features

- Dew point sensor.
- Inlet cyclone filter.
- Inlet carbon filter.
- Outlet sterile / bacterium filter.
- Nitrogen buffer tank.
- Remote monitoring and control via Ethernet connection.
- Containerized or single-skid turnkey system.
- 650W UPS uninterruptible power supply.




MENTIS ENGINEERING

On-site Nitrogen (N₂) gas generation solutions

Installation View

The installation image below represents the general process layout between compressor, dryer, filtration, air receiver, PSA generator and product gas receiver.

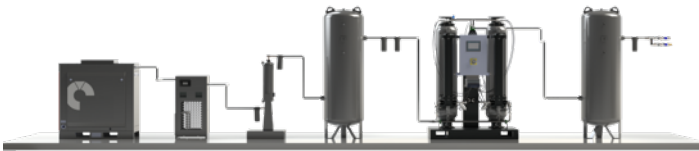

Standards Compliance

- CE Conformity (Machinery Directive 2006/42/EC)
- EMC Directive 2014/30/EU
- LVD Directive 2014/35/EU
- PED 2014/68/EU - pressure equipment conformity
- EN ISO 12100 - machinery safety risk assessment
- EN 60204-1 - machine electrical safety
- ISO 8573-1 Class 1.4.1 - feed air quality
- ISO 9001:2015 quality management system
- Optional: ASME, UL, EAC and project/country-specific certifications

Energy / CO₂ Emission Savings by Nitrogen Purity

Nitrogen Purity	Energy / CO ₂ Emission Savings
95%	76%
98%	70%
99%	66%
99.5%	60%
99.9%	51%
99.99%	27%
99.995%	3%

Automation and Mentis S-PSA Software

- Monitoring screen infrastructure for nitrogen pressure, nitrogen purity, instantaneous consumption flow and outlet dew point.
- Recording and analysis of pressure, purity, consumption and historical process data.
- 24/7 continuous purity measurement and alarm tracking.
- Instantaneous and total consumption monitoring via digital flowmeter.
- Consumption charts, trend analysis and historical data records.
- Smart scheduled maintenance alerts designed to reduce unforeseen service costs.
- HMI language interface options in English, Turkish, Russian, Arabic and Spanish.
- Modbus / RTU and LAN / Ethernet communication infrastructure.

On-site Nitrogen (N₂) gas generation solutions

**P&ID
Page**

Model	S-PSA-7-N2
Model purity	%99.9
Model flow	31.5 Nm³/hr @ %99.9
Nitrogen Pressure	1.0 - 10.0 bar(g)
Air Quality	ISO 8573-1 Class 1.4.1




MENTIS ENGINEERING

On-site Nitrogen (N₂) gas generation solutions

General Arrangement and Dimension Drawing

The drawing below shows the common mechanical design reference for all generators. All dimensions are in mm.

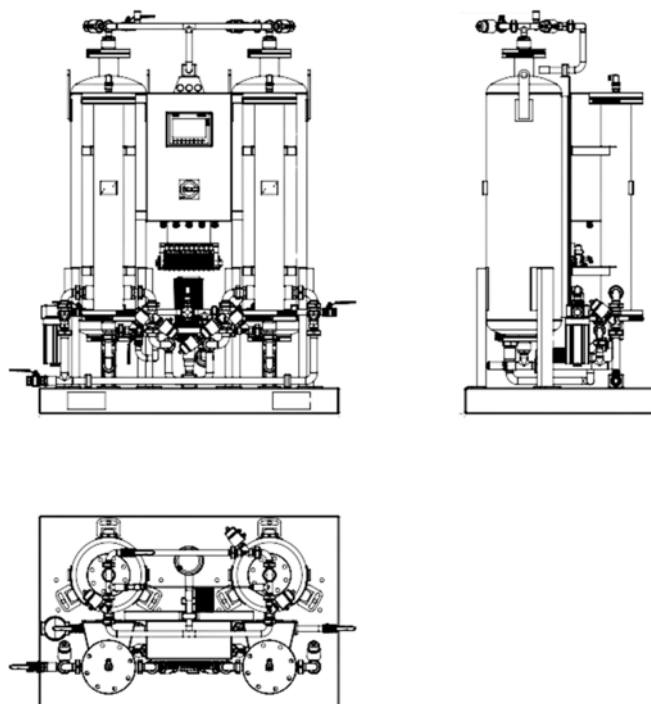

Dimension and Connection Summary

Model	S-PSA-7-N ₂
W x L x H (mm)	1400 x 900 x 2260 mm
Inlet connection diameter	1 1/2"
Outlet connection diameter	1"

The drawing is schematic for general arrangement purposes; final manufacturing dimensions shall be verified with the approved project drawing. Drawings may vary by +/- 5% depending on the project.

MENTIS ENGINEERING

N₂ S-PSA

Mentis Engineering Contact Information

Please contact us for further information, quotation support, site evaluation and technical assistance.

WEBSITE

www.mentiseng.com

EMAIL

info@mentiseng.com

PHONE

+90 332 342 38 80